



IMPORTANT SAFETY PRECAUTIONS

Before you begin, read these instructions completely and carefully.

- Be certain electrical power is OFF before and during installation, maintenance and removal.
- Luminaire wiring must be properly grounded in accordance with the NEC and any applicable local code requirements.
- Use only UL or IEC approved wire for input/output connections.
- Verify that supply voltage matches voltage on luminaire label. Installation to any other connection may void the warranty.
- Wear gloves during installation to prevent injury and do not expose wiring to metal or sharp edges.
- Do not install in areas subject to combustible vapors or gases. Verify luminaire location ratings are suitable for installation environment (refer to specification sheet as needed).
- Do not restrict luminaire's ventilation by covering with material that will cause luminaire to overheat and potentially shorten the life span.
- Ensure LED luminaire has the correct polarity before installation.



WARNING: To reduce the risk of personal injury or property damage from fire, electrical shock, falling parts, abrasions, burns and all other hazards, read all provided warnings and follow installation instructions.


This product should be installed, inspected and maintained by a qualified and licensed electrician. Installation of luminaire must be in accordance with NEC and local code requirements.

SAVE THESE INSTRUCTIONS



PRODUCT DIAGRAM

A: Light Fixture
B: Wire Nut

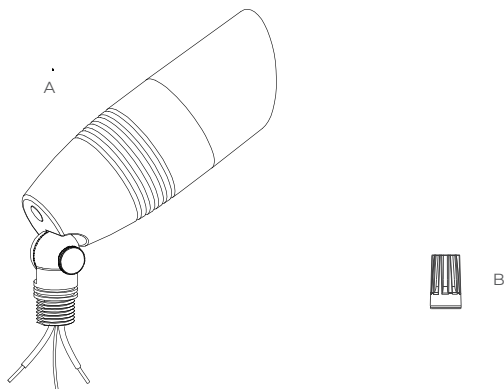


INSTALLATION INSTRUCTIONS

WALL MOUNTING

Mount to a weatherproof junction box and cover plate (not supplied) as shown. To ensure weatherproof seal, apply weatherproof silicone sealant around the edge of the wall cover plate or surface box. This is especially important with an uneven wall surface.

- 1) Seal arm thread using Teflon tape or silicone sealant.
- 2) Thread fixture into Cover Plate (not supplied).
- 3) Connect wires as shown in the wiring diagram.
- 4) Attach cover plate to Junction Box (not supplied).
- 5) Aim floodlight in the direction desired and tighten locknut and Arm Screw.

FIG. 1

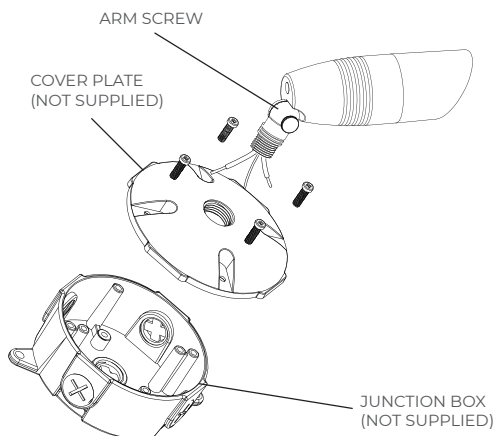


WIRING

Universal voltage driver permits operation at 120V, 60Hz

- 1) Connect the black fixture lead to the LINE supply lead.
- 2) Connect the white fixture lead to the COMMON supply lead.
- 3) Connect the GROUND wire from fixture to supply ground.

FIG. 2

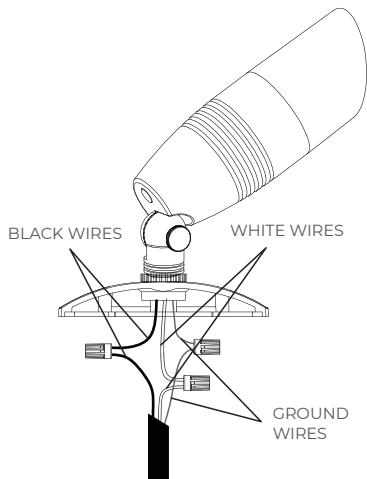


SAVE THESE INSTRUCTIONS



INSTALLATION INSTRUCTIONS (CONTINUED)

- 4) Loosen the knob, adjust the angle you need then tighten the knob.
- 5) After finishing the wire connection, turn on the power, and select the color temperature from 2700K, 3000K, 3500K, 4000K, and 5000K with the button shown in Fig.3. Make sure all fixture are working well, and the color temperature is what you need.

FIG. 3

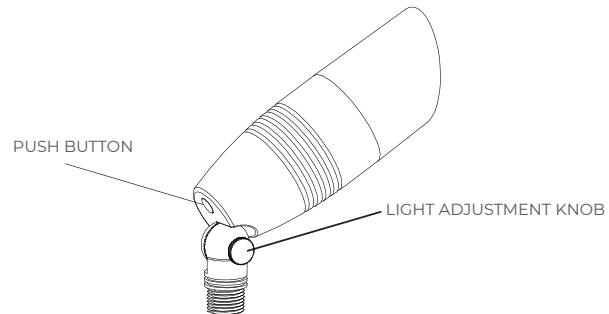

TROUBLESHOOTING

IF ALL LIGHTS ARE NOT WORKING PROPERLY

- Check if the power is turned on.
- Check to make sure the input voltage is 120V.
- Check to make sure that the transformer is properly connected.

IF SOME LIGHTS ARE NOT WORKING PROPERLY

- Check the wiring, make sure that all connections between the lights and the main power cord are tightened properly.
- Check all connectors to ensure they are functioning properly. If the lights still do not work after making several adjustments, contact our customer service team as soon as possible.

SAVE THESE INSTRUCTIONS

