



RoHS  
Compliant



## IMPORTANT SAFETY PRECAUTIONS

**Before you begin, read these instructions completely and carefully.**

- Be certain electrical power is OFF before and during installation, maintenance and removal.
- Luminaire wiring must be properly grounded in accordance with the NEC and any applicable local code requirements.
- Use only UL or IEC approved wire for input/output connections.
- Verify that supply voltage matches voltage on luminaire label. Installation to any other connection may void the warranty.
- Wear gloves during installation to prevent injury and do not expose wiring to metal or sharp edges.
- Do not install in areas subject to combustible vapors or gases. Verify luminaire location ratings are suitable for installation environment (refer to specification sheet as needed).
- Do not restrict luminaire's ventilation by covering with material that will cause luminaire to overheat and potentially shorten the life span.
- Ensure LED luminaire has the correct polarity before installation.
- Lynx Linear Lighting is not liable for damages resulting from improper or faulty installation or operation or unauthorized modifications to the luminaire.
- Electrostatic discharge can damage the LED tapelight.
- Do not touch or clean the LEDs.
- Not suitable for covering with thermally insulating material.




**WARNING:** To reduce the risk of personal injury or property damage from fire, electrical shock, falling parts, abrasions, burns and all other hazards, read all provided warnings and follow installation instructions.

This product should be installed, inspected and maintained by a qualified and licensed electrician. Installation of luminaire must be in accordance with NEC and local code requirements.


**SAVE THESE INSTRUCTIONS**

**DIMENSIONS**

**SW-AC**



**SIDE VIEW**

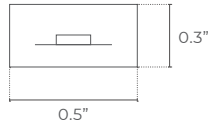


**ADDITIONAL IMAGERY**




**ALUMINUM CHANNEL INSTALLATION INSTRUCTIONS**


- A) Drill holes on mounting surface, ensuring holes are level.
- B) Insert anchor into drilled holes.
- C) Align clips with drilled holes. Secure clips with screwdriver, using provided screws.
- D) Place tape in extrusion, press gently to secure.
- E) Click lens into place.
- F) Plug strip into 120V outlet. Installation is complete.

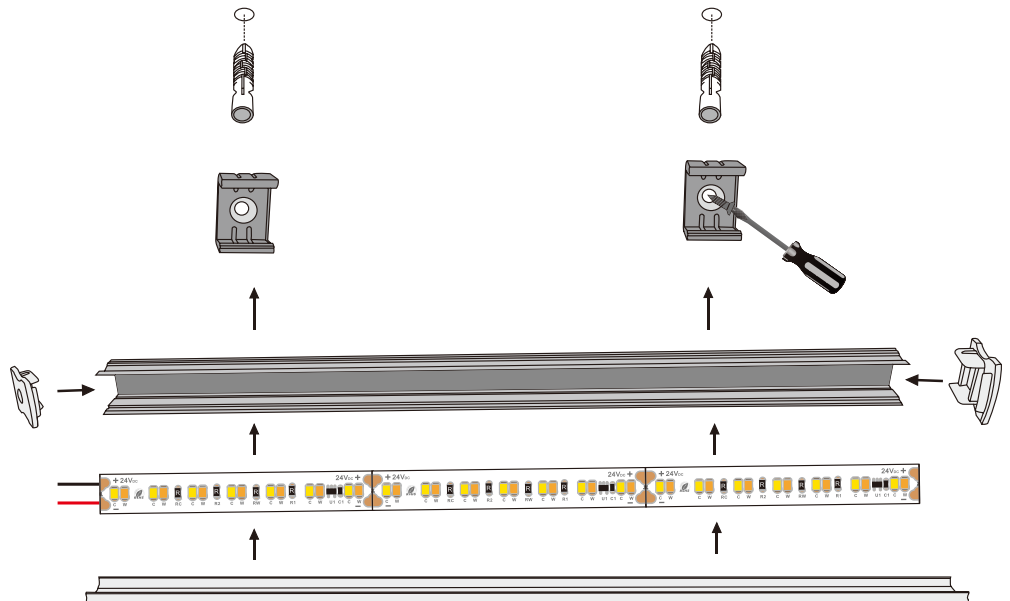

**SAVE THESE INSTRUCTIONS**

**BRACKET INSTALLATION INSTRUCTIONS**

- A) Drill holes on mounting surface, ensuring holes are level.
- B) Align bracket clips with drilled holes. Secure clips with screwdriver, using provided screws.
- C) Secure strip in brackets.
- D) Plug strip into 120V outlet. Installation is complete. 

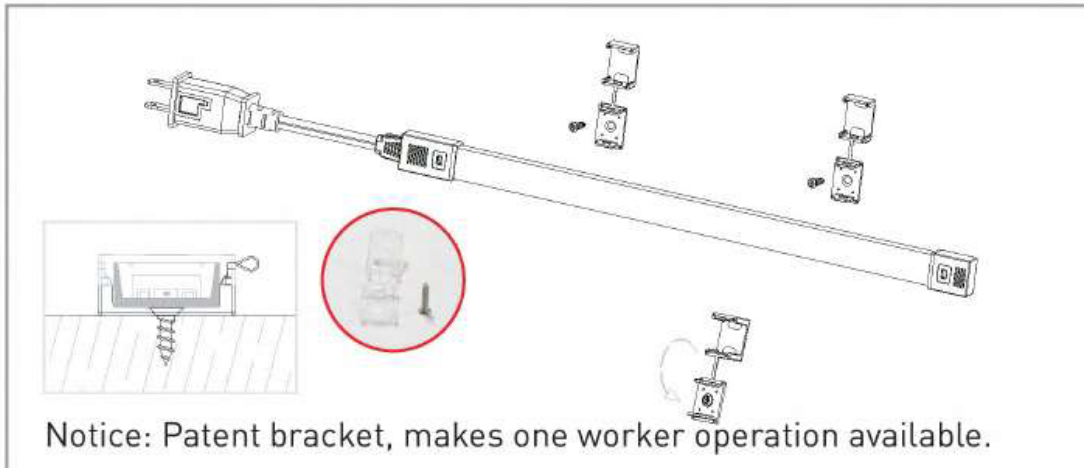

**SAVE THESE INSTRUCTIONS**